


Global Emergency-Open


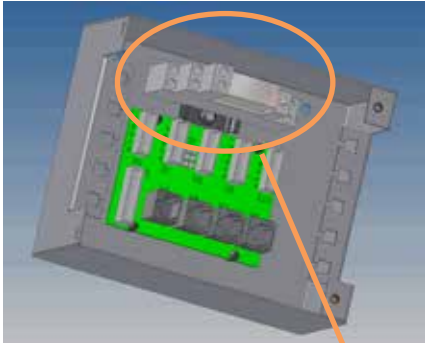


To establish the global emergency-open function (when pressing the emergency-open switch on one door all doors of the interlock system are released) you need the following components:

- Pluggable additional relay, part no. 710921
- 6 core power cables (instead of the 2-core power cables)

The additional relay is attached to the top hat rail of any one of the distribution boxes of the system and the connector is plugged in a free socket of the distribution box (X6 - X10).

Possibility to transmit the signal that the emergency-open has been actuated (potential-free make/break contact)

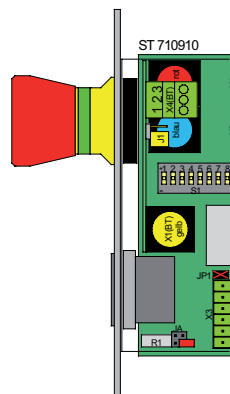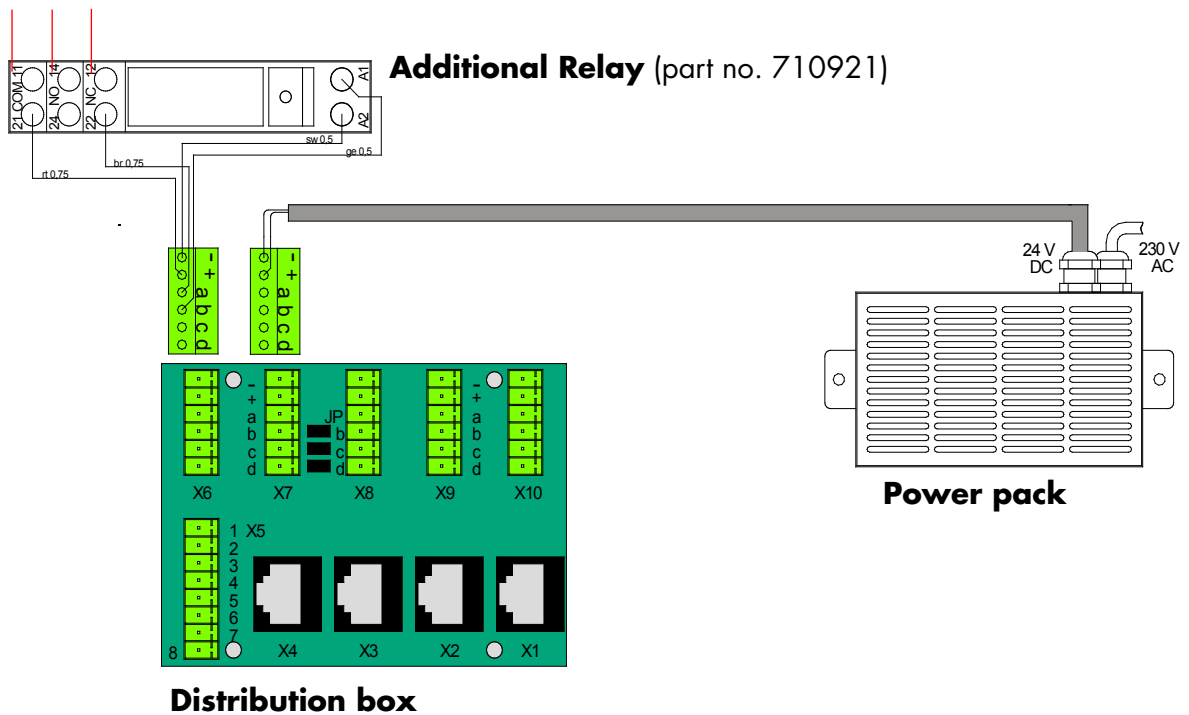

The jumper JP1 has to be removed in all control terminals of the system!